


Quick Guide

Introduction to the operation of hardware and software

MCD-CodeMeter-Licenseserver

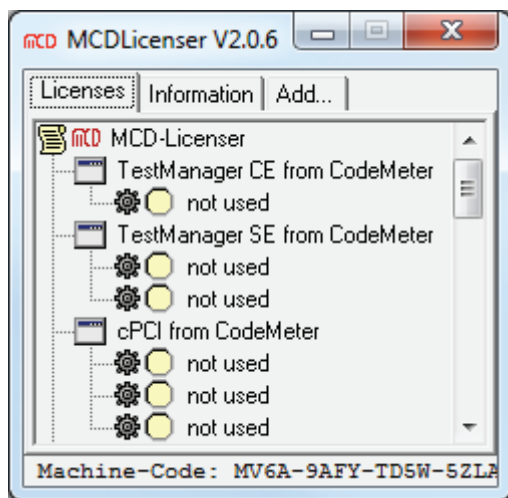

Softline

Modline

Online

Boardline

Avidline

Pixline

Application



MCD Elektronik GmbH

Hoheneichstr. 52

75217 Birkenfeld / Germany

Fon +49 (0) 72 31/7 84 05-0

Fax +49 (0) 72 31/7 84 05-10

info@mcd-elektronik.de

www.mcd-elektronik.de

HQ : Birkenfeld

Managing CEO : Bruno Hörter

Register Court Mannheim

HRB 505692

1. General

The software of the MCD test collection can now optionally be protected with a USB dongle.

A link between a license and the PC with a hardware code is no longer necessary.

The protection is done via the MCD license server. This has the advantage that existing systems can be switched to the USB dongle without software updates of the TestManager CE / SE, cPCI, P475, etc. It is sufficient to replace or to install the MCD license server.

2. Download

The necessary software can be downloaded from the following link:

www.mcd-elektronik.de/fileadmin/assets/downloads/zip/testmanager/MCDCodeMeterLicenser.zip

For the subsequent installation this ZIP-package is to extract first. It contains the following files:

- CodeMeterRuntime.exe
- MCDCodeMeterLicenser.exe

3. Installation

The installation is done in three steps:

1. Installing the code meter runtime
2. Connect the USB dongle and install the device driver
3. Registration of the new MCD-code meter license server

3.1. CodeMeter-Runtime

Start of the CodeMeterRuntime.exe file and installation according to the on-screen instructions.

All default settings can be retained.


3.2. USB-Dongel

Connect the USB dongle and wait until the automatic driver installation is complete.


3.3. MCD-CodeMeter-Licenseserver

To register the MCD-CodeMeter-Licenseserver the MCDCodeMeterLicenser.exe must be started once as an administrator. In Windows XP, a start with a user who has administrator rights is enough.

In Windows Vista / 7/8, a user with administrator privileges is also required. Additionally, note that the MCDCodeMeterLicenser.exe is also started as administrator.

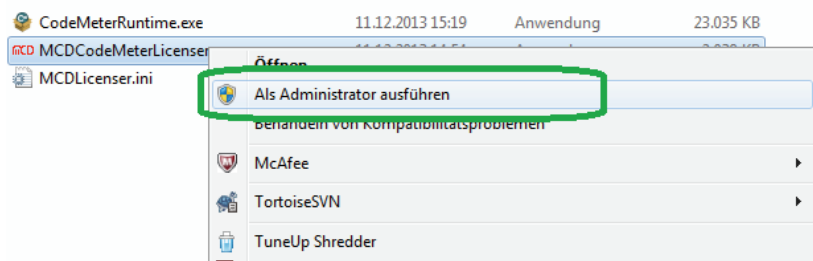

The installation is now complete. If a software component of the MCD TestCollection is started, the MCD-CodeMeter-Licenseserver is requested for a license. If the USB dongle is not present, the license server and the software can not be started.

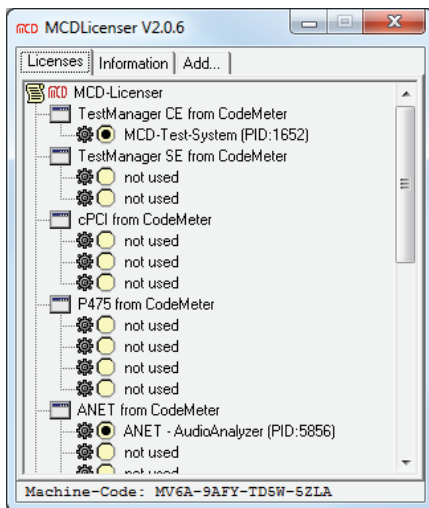

Mixed operation with the former on the hardware code based licenses and the USB dongle is also possible.