

Manual

Toolmonitor PowerSupply

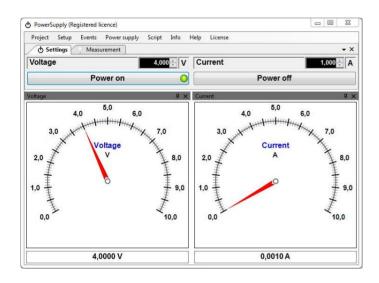

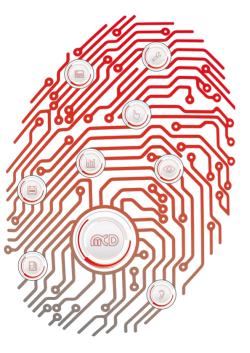





Softline — Modline — Online —

Application

MCD Elektronik GmbH

Template version: 5.4 / 2018-04-09 V1.1 2018-09-03 YR (TS)

Table of Contents

1.	GE	NERAL	.3
2.	PR	ODUCT FEATURES	.4
	2.1.	Software	.4
3.	SYS	TEM REQUIREMENTS	. 5
:	3.1.	REQUIREMENTS	.5
:	3.2.	LICENSE	.5

1. General

The MCD Toolmonitor PowerSupply makes controlling and monitoring of various power supplies possible. The users may choose from a variety of implemented power supplies and add their own new equipment as needed. The power supplies will be connected with the computer using an interface and will communicate with the Toolmonitor PowerSupply using that connection. A variety of consumers can be supplied using the software and the supply of power can be monitored.

Communications can be ensured in general using a variety of interfaces with the MCD Toolmonitor PowerSupply and the voltage as well as the maximum current can be controlled thereby. The measured values may be displayed in either digital or analog format.

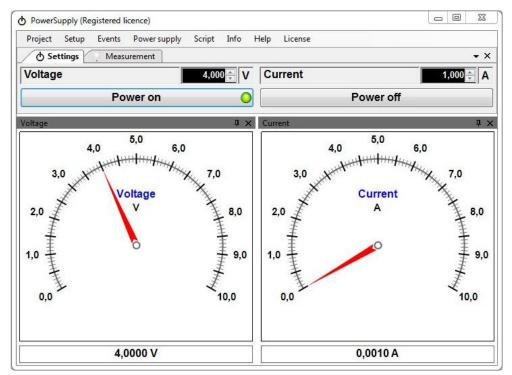


Figure 1: Toolmonitor PowerSupply

Alternatively, the voltage and the current at the power supply can be depicted as a curve over time using a chart.

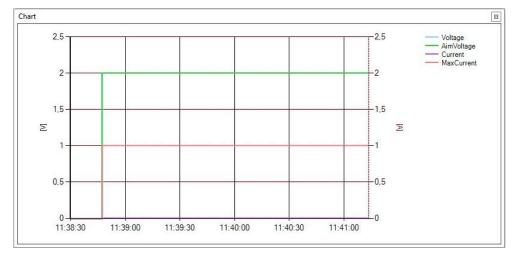


Figure 2: Plot of Voltage and Current Over Time

Using third - party software, the Toolmonitor PowerSupply can be entirely remote controlled. COM / DCOM or a .Net assembly may be used as the interface for this. Thereby, the Toolmonitor can be integrated into a number of applications, including Microsoft Visual Studio[®] (C#, C++ and Visual Basic), Microsoft Office[®] (such as Excel[®]), Open Office[®], LabVIEW[®] and MCD TestManager CE.

Order number: # 122788

2. Product Features

2.1. Software

The program interface can largely be designed with an open hand and customized to the users' requirements. Once created, configuration can be saved in **Project Files** and loaded as needed. Example projects have been included with the installation files in German and English.

All measurements and settings can be sent and received automatically with the help of an integrated **script engine**. A custom user interface can also be created in combination with the **Visualization module** dialog.

All information exchanged between the Toolmonitor PowerSupply and the power supply can be seen at a glance from the **Communications dialog**. There is also the ability to communicate directly with the connected power supply and send commands, without using the software buttons and features specially intended for that purpose.

Time	Туре	Data			Comment	1	
1:38:41.0	Write	ISET1:0.000				mum current	
11:38:41.1	Write	ISET17 30 2E 30 30 30 00 : 0.000. VSET1 02.00 VSET1? 02.00			Read ma:		
11:38:41.2	Read					ximum current response	
11:38:41.2	Write				Set voltar		
1:38:41.3	Write						
1:38:41.4	Read				Read voltage		
11:38:45.7	Write	OUTO			Power off		
1-38-45.8	Write				Read status		
1:38:45.9	Read	00 :			Read power status response		
11:38:45.9	Write	ISET1:1.000				Set maximum current	
11:38:46.0	Write	ISET1?				Read maximum current	
11:38:46.1						Read maximum current response	
11:38:46.2	:38:46.2 Write VSET1:02.00				Set volta	ge	
11:38:46.3	Write	VSET1?			Read vol	Read voltage	
11:38:46.4	Read 02.00				Read volt	tage response	
11:38:46.4	Write	ISET1:1.000			Set maxin	Set maximum current	
11:38:46.5	Write	ISET1?			Read maximum current		
11:38:46.6	38:46.6 Read 31 2E 30 30 30 00 : 1.000.				Read maximum current response		
11:38:46.6	Write	VSET1?			Set voltage Read voltage		
11:38:46.7	Write						
11:38:46.8 Rea					Read voltage response		
11:38:46.8					Power on		
11:38:46.9 Write		STATUS?			Read stat	100	
11:38:47.0	Read	A			Read pov	wer status response	
		Name	Format	Data	Com	nment	
Name				omment		Write	Add Uu

Figure 3: Communications Dialog

3. System Requirements

3.1. Requirements

- Operating system: Windows XP[®] Windows 8.1[®]
- Architecture: 32 bit or 64 bit
- .Net framework: Version 3.0

Copying *PowerSupplyMonitor.exe* to any directory on the target system will suffice to install the Toolmonitor PowerSupply.

Alternatively, the installer provided *PowerSupply.msi* may be executed.

3.2. License

To protect the software against unauthorized use, the Toolmonitor must be licensed after installation.

For demonstration and test purposes, the Toolmonitor can be run for 30 minutes even without a license. Several program features will be disabled in that case. To work around the wait period for activation (such as on weekends), a license for a 24 - hour period may be activated.