







INSTALLATION

2.

Connect Demo


Board via USB.



Buzzer

▲ DIP Switch 6 switches between local + remote mode.

To use software mode make sure that DIP Swich 6 is turned off.

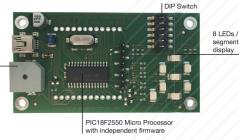





with Toolmonitor

and TestManager

Application



